# **INSTALLATION GUIDE**

CVR-180.6



Keep an eye out for these icons:





#### **PARTS INCLUDED:**



180 Cover



**Bulkhead Angle** 



Screws (5)



1/4" Rivet Nuts (5)

Clamps (2)



1/8" Hex Key





Bedrail Can

Gas

Springs (4)

TOOLS REQUIRED:







Driver Bit : Drill Bit : Drill Bit : Knife







Rivet Nut

**Installation Tool** 

Ratchet Wrench. (Torque Wrench

1/4" Lock

Washers (5)



1/4" Flat

Washers (5)



Bolts (5)

9/16" Socket

1/4" Hex Bulkhead Cap







## PRE-INSTALLATION NOTES (REVIEW ALL OTHER INCLUDED INSTALLATION GUIDES BEFORE BEGINNING)




Most trucks require the bulkhead weatherstrip to be installed and some require additional bulkhead preparations. Please refer to the instructions in the Bulkhead Prep Kit prior to mounting the cover.

If you have the factory bed liner, remove it or use a rotary tool to trim the top of its bulkhead wall so that the its edge sits no higher than 3-1/4" below the plane of top of the bed rail caps to its left and right.


If you are installing a bin, refer to the bin's installation guide for details.


#### PREPARE THE BULKHEAD

Referencing the image below, align the **Bulkhead Angle (longer leg** down), centered side to side between the bedrails, and it should sit 1/4" below the top of the bedrails. Attach using a drill, 3/8 nut driver bit, and included self drilling screws.

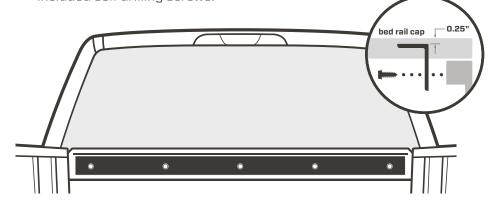

- Detach bulkhead angle by removing the self-drilling screws and set aside. Use the 25/64" drill bit to enlarge the holes in the bulkhead left by the self-drilling screws.
  - Protection is needed to avoid drilling directly into the cab. Create a physical stop on the drill bit or place protection between the bulkhead and cab to prevent damage.
- Thread a rivet nut onto the rivet nut installation tool. Hand-tighten until the hexagonal sleeve is tight to the face of the rivet nut. Next, using a rubber mallet, gently tap rivet nut into the pilot hole.

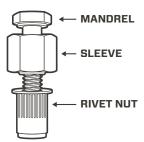

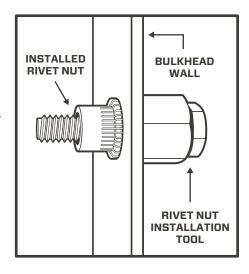



Use a 9/16" wrench to hold the sleeve of the **rivet nut installation** tool as you tighten the mandrel with a 7/16" socket until the rivet nut deforms and locks against the interior of the bed wall.




At approximately 2 full revolutions, the nut should be tight. Do NOT overtighten or you will risk stripping the rivet nut.

Remove the installation tool by unscrewing the mandrel. Repeat steps 3-5 for each rivet nut.


With all rivet nuts installed correctly, reattach all brackets using the provided hex bolts and washers as shown. Tighten with a 7/16" socket, **ensuring not to overtighten** the bolts or you will strip the rivet nuts.



Re-installing the Bulkhead angle using the hex bolts and washers is easiest if you enlarge the holes in the clamp bracket using the 5/16" drill bit.

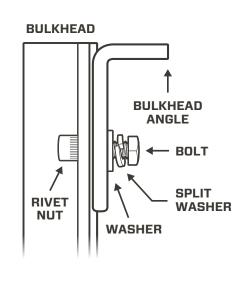


### **MOUNT THE COVER**

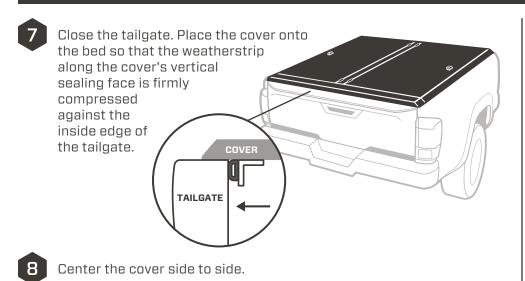


Secure the T-panel to the truck by tightening two cap clamps under each of the three ends of the T-panel.


Place the clamps' bottom jaws under the bed rails at the two sides and under the bulkhead angle mounted to the bulkhead. Uniformly tighten the cap clamps using a 9/16" socket to between **5-6 ft-lbs**.

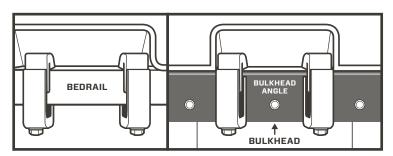


- While tightening clamps, be aware of possible bed rail cap deformation. Overtightening clamps will damage bed rail caps and cause leaking.
- Retighten after a week of use. Check them every time you haul on top.

#### **ADJUST THE LOCK RODS**

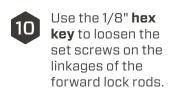

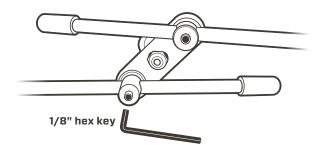

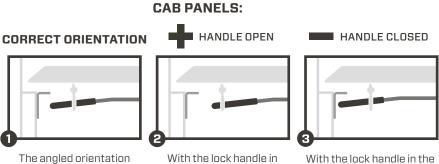

the open position, the


rod tips just clear the

bulkhead angle.

The angled orientation is always maintained

With the lock handle in the closed position, the lock rods are fully under the bulkhead angle brackets and engaged as much as possible. Ensure the lock handle fully closes.

To properly align the lock rods, the lock rod bracket may need to be adjusted vertically, utilizing a 7/16 socket for the adjustment. To ensure a tight seal, it is crucial to push downward on the panel when tightening in place.

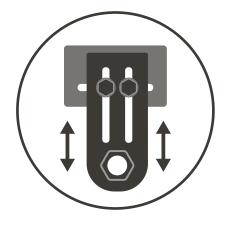

Double-check both panels to ensure they open, close, lock & seal correctly. If at any point the weatherstrip does not touch the bed rails, readjust the lock rods and mounting brackets as needed.



Lock handle operation is easiest when you press down on the access panel.

#### **ATTACH THE GAS SPRINGS**

