

## INSTALLATION GUIDE

BH-4

**15 minutes**  
Normal Install Time

**Keep an eye out for these icons:**

**IMPORTANT!**  
Important installation information

**Helpful Hints**  
Tips to assist installation

### PARTS INCLUDED:



Angle Iron



P-Shaped  
Weatherstrip



Self-Drilling  
Screws (6)

### PRE-INSTALLATION NOTE:

To ensure the weatherstrip sticks, make sure the surface temperature of your bulkhead and the angle iron is at least 50°F and will remain so for at least a day.

### TOOLS REQUIRED:



Drill



3/8" Nut  
Driver



Rubbing Alcohol  
or Glass Cleaner



Lint-Free  
Cloth




Scissors



Silicone

## INSTRUCTIONS

- 1 Attach the **angle iron** to the bulkhead flush with the top of the **bed rails** using a drill, a 3/8" nut driver, and self-drilling screws.

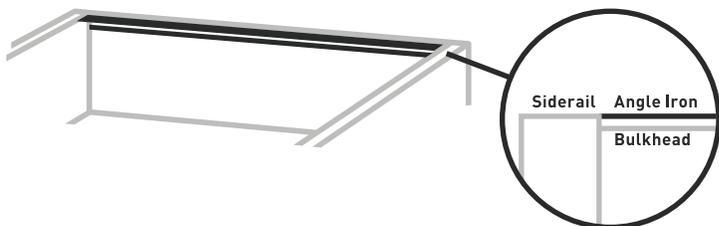


Since the top of the bulkhead sits lower than the tops of the bed rails, the angle iron should end up slightly higher than the top of the bulkhead.

Installing the angle iron is easiest if you pre-drill it using the screws.

- 2 Clean the tops of the bulkhead and angle iron thoroughly with a clean, lint-free cloth and rubbing alcohol or glass cleaner. Allow to dry.

It is very important that these surfaces be both dry and completely free of dirt, oil, or any other contaminants prior to application of the weatherstrip.

- 3 Place one end of the **weatherstrip** tight against the interior edge of a bed rail cap. Align the narrower band of adhesive with the top of the bulkhead.

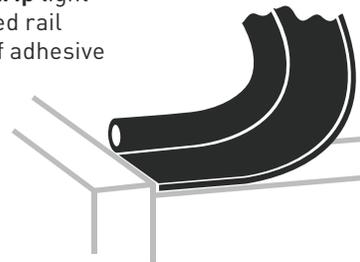


- 4 Peel the red backing off both adhesive bands 4 to 6 inches at a time and affix the weatherstrip by pressing down firmly along its length across the entire width of the bulkhead and angle iron.

Never stretch the weatherstrip when applying. If you do, its adhesive will fail.

- 5 Cut the weatherstrip such that its other end is tight against the inside edge of the opposite bed rail cap.

- 6 Apply a bead of silicone at each seam between the weatherstrip and the bed rail caps.

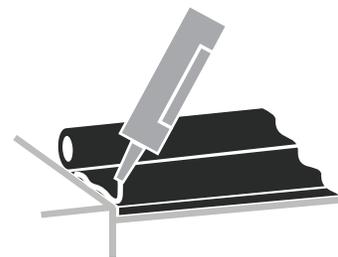

- 7 After you have installed your DiamondBack, leave the front portion of it closed and locked for 24 hours to allow the adhesive, which is pressure-activated, to cure.