

## INSTALLATION GUIDE

BH-2

**20 minutes**  
Normal Install Time

**Keep an eye out for these icons:**

**IMPORTANT!**  
Important installation information

**Helpful Hints**  
Tips to assist installation

### PARTS INCLUDED:



6' Sticker-Tite Rubber Gasket

### TOOLS REQUIRED:



T30 Torx/Star Wrench



Rubbing Alcohol or Glass Cleaner



Clean, Lint-Free Cloth




Silicone

## INSTRUCTIONS

To ensure the bulkhead gasket sticks, make sure the surface temperature of your truck is at least 50°F and will remain so for at least a day. 50°F min.

**1** Remove the square-tube top rail of the bulkhead by undoing its five bolts with a T30 Torx wrench.

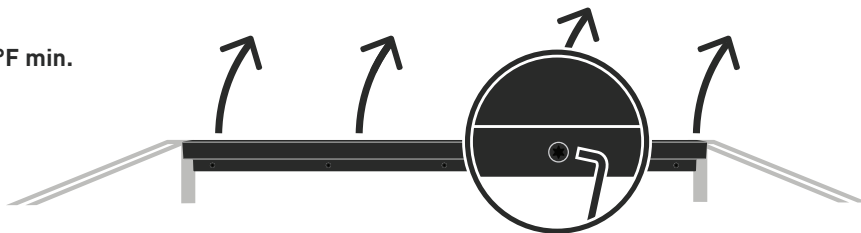

**2** Clean the top of the bulkhead thoroughly with a clean, lint-free cloth and rubbing alcohol or glass cleaner. Allow to dry.

It is very important that the top of the bulkhead be both dry and absolutely free of dirt, oil, or any other contaminants prior to application of the gasket.

**3** Affix the **gasket** to the top of the bulkhead so that:

- it is tight against the interior edges of the bed rails at both ends,
- it is flush with the leading edge of the bulkhead,
- its excess width is folded down against the face of the bulkhead, forming a slight L profile.

**4** Reattach the square-tube top rail to the bulkhead over the gasket.

**5** Fill the gaps between the bed rail caps and the square-tube top rail with silicone.

**6** Apply a bead of silicone to the cabward end of each bed rail cap to prevent water from entering the bed from under the cap.

