



LADDER RACK CAB GUARD

(800) 935-4002 | DIAMONDBACKCOVERS.COM

INSTALLATION GUIDE

1 Hour
Normal Install Time

Keep an eye out for these icons:

! IMPORTANT!
Important installation information

★ Helpful Hints
Tips to assist installation

PARTS INCLUDED:



Hinge Mounted Cab Guard



5/16" Rubber Washers (2)



5/16" Plain Washers (2)



5/16" Fender Washers (2)



5/16" Nylon Lock Nuts (2)



DB-LDR U-Bolts (2)




KM-LDR U-Bolts (2)



Lock Bracket (1)



5/16" Lock Washers (10)

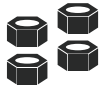

5/16" Stainless Nuts (16)

TOOLS REQUIRED:



Ratchet Wrench



1/2" Socket



Drill



5/16" Bit



Marker


PRE-INSTALLATION NOTES:

The DiamondBack Cover must be installed before installing the Ladder Rack

INSTALLATION

1 Open and lock the stainless spring latch on the cab guard. Place the cab guard hinge down on the cover with the stainless spring latch facing the cab window.

2 Center the cab guard left to right on the cab panel with the top of the cab guard frame resting entirely against the cab cross bar of the ladder rack.

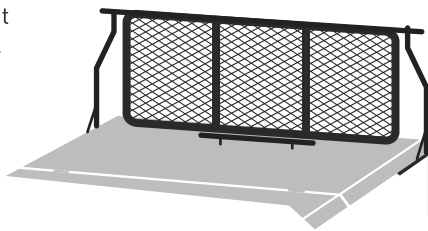

3 Using a permanent marker, mark the location of the 5/16" bolts that mount the cab guard hinge to the top of the cover.

4 Set the cab guard aside and open the cab panel of the cover. Check the underside of the cover for any hardware that may interfere with the hinge mounting holes. Relocate the holes if necessary.



5 Drill the hinge mounting holes with the 5/16" bit, and place the bolts of the cab guard hinge through the holes.

6 Place one 5/16" rubber backed washer (rubber facing the underside of the cover), one fender washer, one flat washer, and one nylon-locking nut on each bolt and tighten firmly with a 1/2" socket and ratchet.

7 Close the cover, then hinge the Cab Guard up to rest against the cab cross bar of the Ladder Rack.

8 Secure the latch plate to the cross bar using the U-bolts

9 Adjust the placement of the latch plate to align with the latch bolt, and tighten the U-bolts completely.

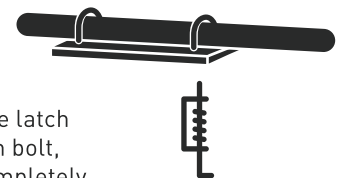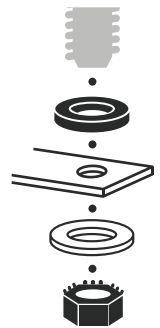

(CONTINUED ON NEXT PAGE)