

INSTALLATION GUIDE

5 minutes
Normal Install Time

Keep an eye out for these icons:

IMPORTANT!
Important installation information

Helpful Hints
Tips to assist installation

PARTS INCLUDED:

WHY A SHIM KIT?

If you place a heavy load at the rear of your DiamondBack HD, you may find it difficult to open and close the tailgate. These shims take the load off the tailgate so you can operate it even with heavy load on top.



5" Shims (2)



INSTRUCTIONS

1 Open the tailgate panel of the cover.

2 Place a **shim** onto each bed rail, tight against the inside of the tailgate.

3 Close the cover.

4 If the lock rods can no longer travel unimpeded past the bed rail lips, drop the tailgate and use a 7/16" socket and the rod guide brackets to reposition the rods.

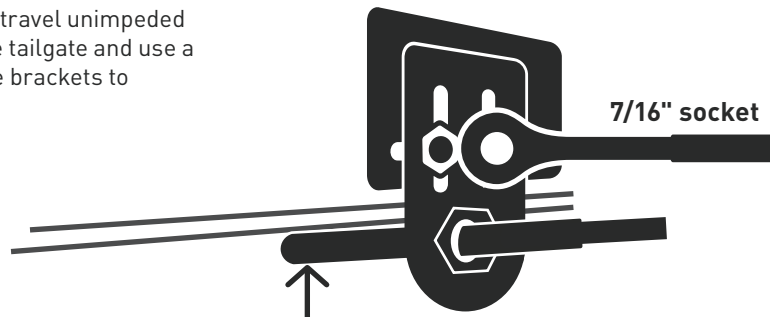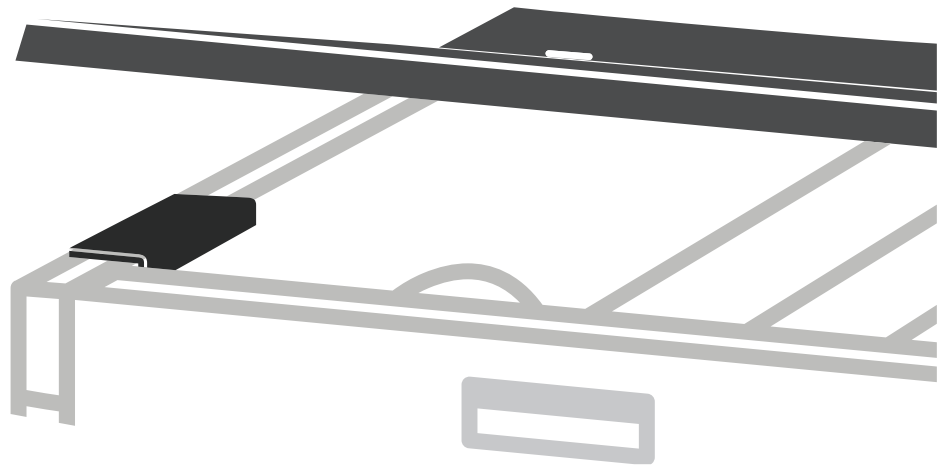

For best weather protection, make sure that in the closed position, the rods draw the tailgate panel down and compress its perimeter weatherstrip.