

## INSTALLATION GUIDE

MISC-5


**15 Minutes**  
Normal Install Time

**Keep an eye out for these icons:**

**IMPORTANT!**  
Important installation information

**Helpful Hints**  
Tips to assist installation

### PARTS INCLUDED:

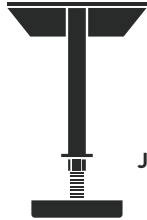

Jack Post

### TOOLS REQUIRED:



Ratchet Wrench



7/16" Socket



Adjustable Wrench

### PRE-INSTALLATION NOTE:


Install your **Shim Kit** before installing the Tailgate-Panel Jack Post. See the **Shim Kit Installation Guide** for details.

### WHY DO I NEED THIS?


If you put a side-by-side on your DiamondBack HD, its weight may make it difficult to open and close your truck tailgate. This jack post takes the load off the tailgate so you can operate it even with a heavy load on top. Use it whenever you haul a side-by-side.

## INSTALLATION


- 1 Loosen the rod guide brackets under the tailgate panel with a 7/16" socket.

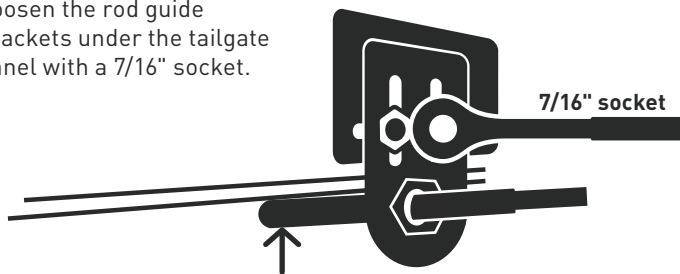

- 2 Close the tailgate panel. Drop the tailgate. Place the **jack post** inside the cargo bed just shy of flush with the edge of the bed floor, centered side to side, footpad parallel to the tailgate.

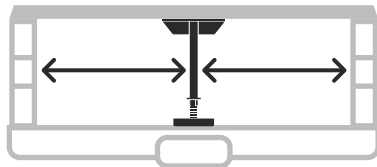


- 3 Turn the nut to raise the jack post until the weatherstrip at the rear corners of the tailgate panel barely touches the bed rails.

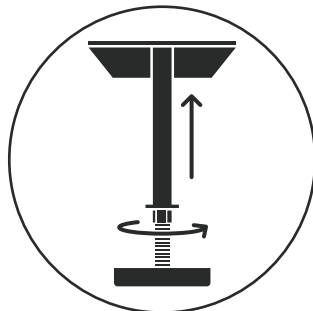

- 4 Close the tailgate. Load the side-by-side onto the cover.

- 5 Open the tailgate. Turn the nut a single rotation to lower the jack post. Test the operability of the tailgate by closing and reopening it.

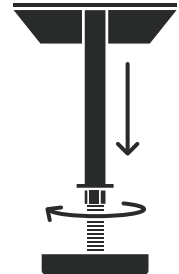

- 6 Repeat step 5 until the weatherstrip along the tailgate is compressed approximately 25% and the tailgate opens and closes satisfactorily.



**25%**

- 7 Retighten the rod guide brackets.