


15.

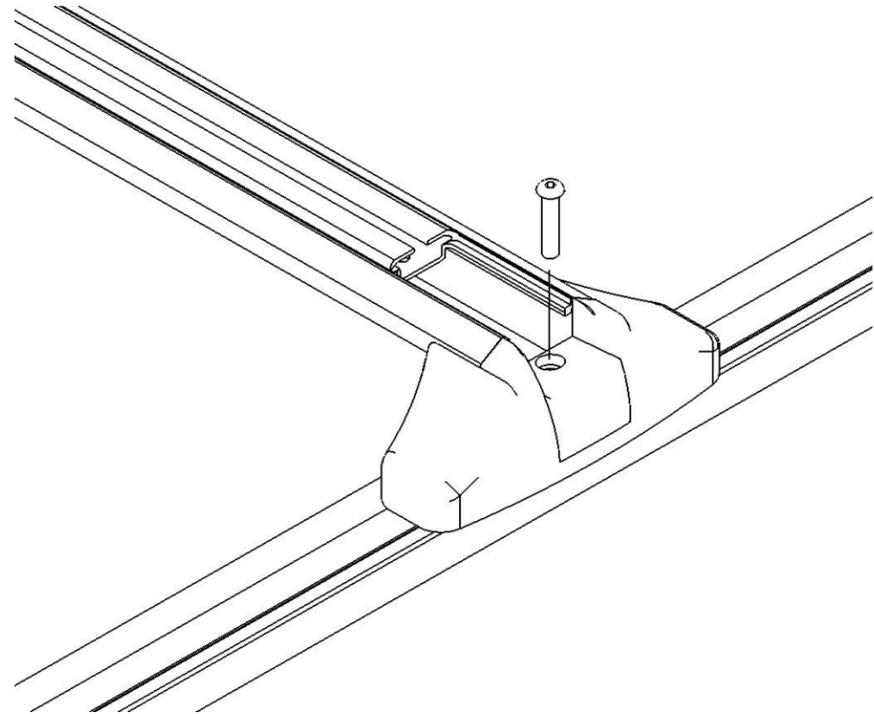

Insert the 1/4-20x 1-1/4" button head screw through the crossbar foot into the rack anchor and tighten with the hex key.

Place the crossbar end cap into the crossbar and tighten the 1/4-20 narrow shoulder screw with the hex key.

Repeat for other track set.

PRO RAC GUIDELINES

Please review the instructions and warranty carefully. Assembly and installation are the purchaser's responsibility and beyond ProRac's control. Therefore, ProRac exclusively limits its warranty to the repair or replacement of a defective ProRac product for up to three years from retail purchase. Warranty excludes damage to your vehicle, cargo, or any person or property during assembly, installation, and use.

- ◆ Do not carry more than 150 pounds (68KG) of combined cargo and accessories on ProRac crossbars. ProRac crossbars do not increase gutter or roof strength. ProRac cannot warranty loads that exceed this limit.
- ◆ Do not use ProRac crossbars and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity. Failure to follow these guidelines or the product instructions will void the warranty.
- ◆ Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened, and locked before every trip. All fasteners must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during long trips to ensure continued fastening security.
- ◆ Check all local and state laws governing projection of objects beyond the width and length of vehicle. Be aware of the width and height of your cargo since low-clearance branches, bridges, and parking garages can affect the load. Never drive with any lock, knob, or rack in an open or unlocked position. All long loads such as, but not limited to, sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks of the vehicle.
- ◆ Remove your rack and accessories when they are not in use and before entering automatic car washes.
- ◆ All locks must be turned and moved periodically to ensure smooth operation. Use graphite or similar dry lubricant. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended. Replacement keys are available only through your ProRac dealer.
- ◆ All cargo will affect the vehicle's driving behavior. For your safety, adapt your speed to the conditions of the road and load being carried. Obey all posted speed limits and traffic cautions.
- ◆ Due to their wind resistance, do not carry disks or wheels with covers on the ProRac bike carrier.
- ◆ Consult your ProRac dealer if you have questions regarding the operation and limits of ProRac products. Review all instructions and warranty information carefully.

© 2008 ProRac Systems, Inc.

Revised 9-24-08
DB1000-IS

ProRac Systems Inc.
1800 Freeway Blvd
Minneapolis, MN 55430-1708


Toll Free: 1-800-217-7133
Phone: 763-546-5620
Fax: 763-546-0933
WWW.PRORAC.COM




Package Contents:

- (1) 3oz Tube of Silicon Sealant
- (1) 5/32" Hex Key
- (2) Crossbars
- (4) U-clips
- (4) Sliding Rack Anchors
- (4) Roof Tracks
- (4) Track Bottom Gaskets
- (4) Track Top Covers
- (4) Crossbar End caps
- (4) 1/4 -20 x 9/16 Narrow Shoulder Screws
- (8) Track End Caps
- (8) 1/4 - 20 X 1-1/4" Button Head Screws
- (12) 1/4 -20 X 3/4" Button Head Screws
- (12) Flanged Washers
- (12) Cap Covers
- (12) 1/4-20 Nuts with Integral Lock Washers

Profile Rack Installation Instructions

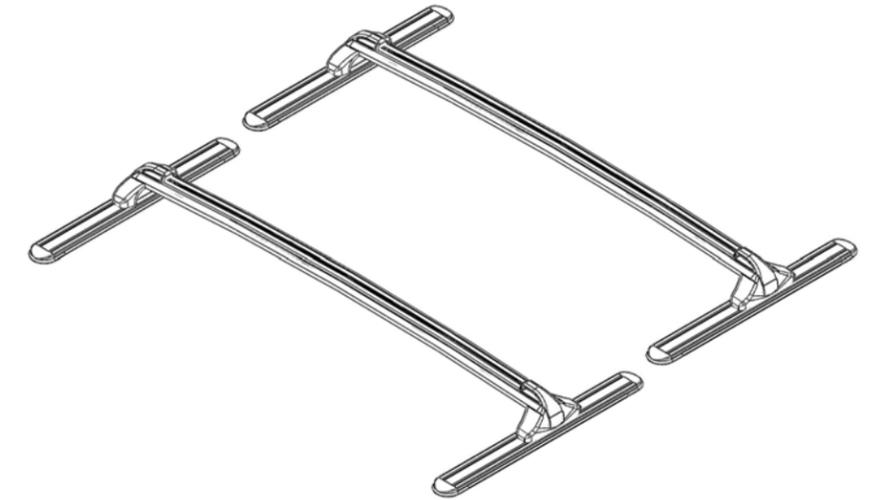


1

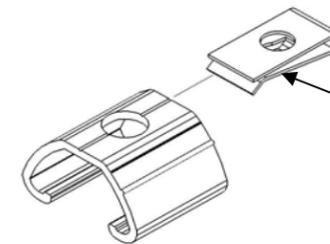

▲ Make certain that the U-clip is oriented as shown!!!


Attach the U-clips to the four sliding rack anchors.

2.

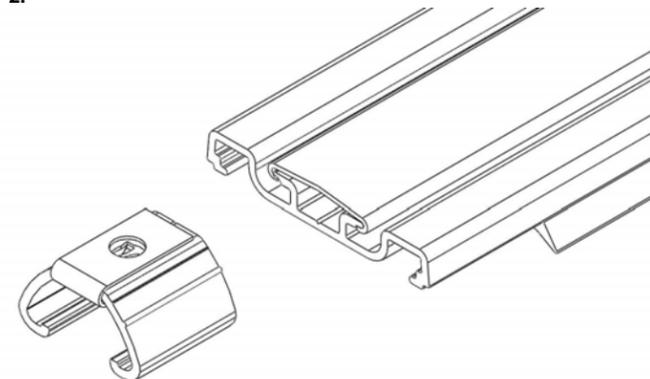

Slide the crossbar sliding rack anchor onto the track.

3.

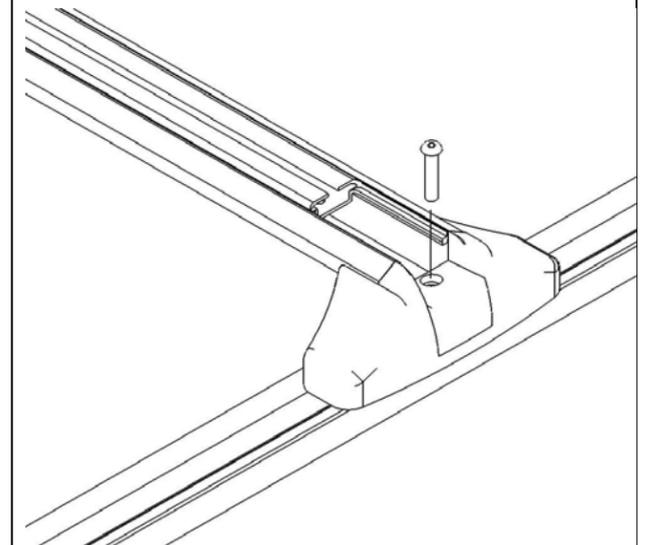

This step is performed on a workbench or floor, not on a vehicle.

Lay the tracks side by side with the raised rib sides of the rack anchors facing each other.


Position the crossbar foot over the rack anchor.

Using 1/4"-20 X 1-1/4" button head screws secure each crossbar through the sliding rack anchor to the track.

Crossbars are used only to position the track and will be removed later.


ProRac Systems Inc.
1800 Freeway Blvd.
Minneapolis, MN 55430-1708

Toll Free: 1-800-217-7133
Phone: 763-546-5620
Fax: 763-546-0933
WWW.PRORAC.COM

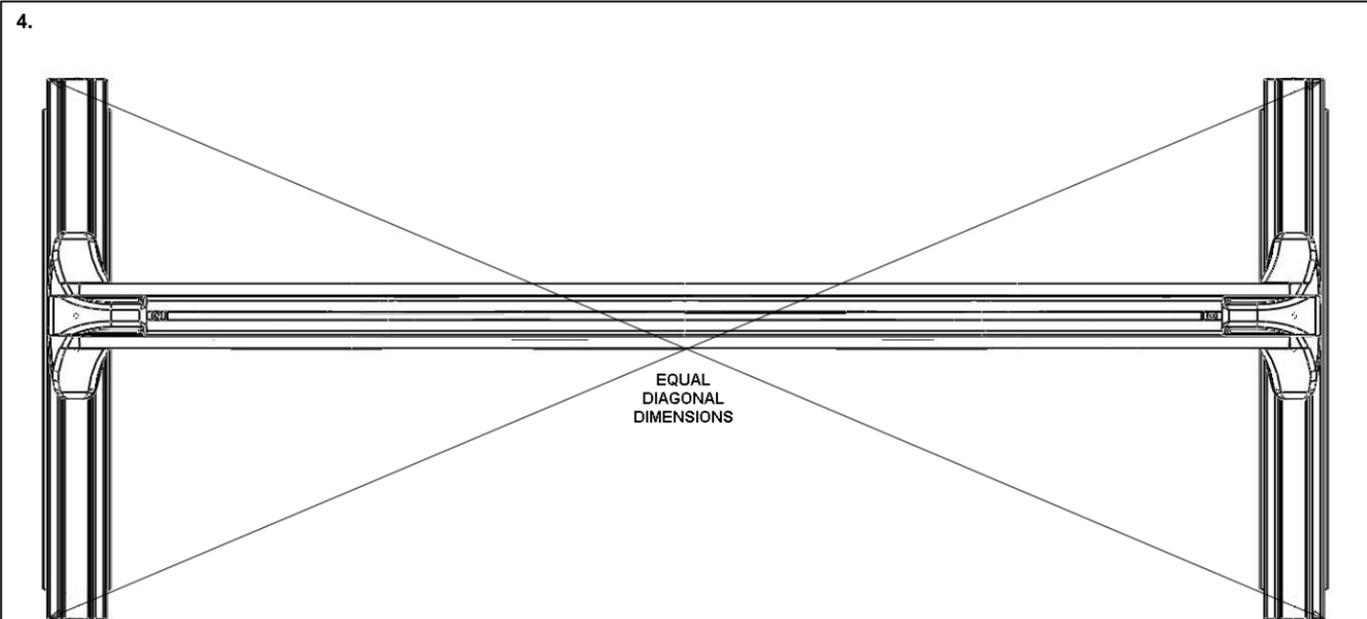


4. Ensure that the assembly is square by taking diagonal measurements from corner to corner. The dimension must be equal. When the measurements are equal, fully tighten the crossbar to the tracks. Place the assembly on the roof / cap and center. Recheck that the rack is still square. Adjust if needed.


5. Without disturbing the rack positioning, lift up the edges of the top gasket to reveal the corner holes. Mark the center of the four corner holes onto the roof / cap using a center punch. Remove rack assembly from the roof. Remove crossbars from tracks.

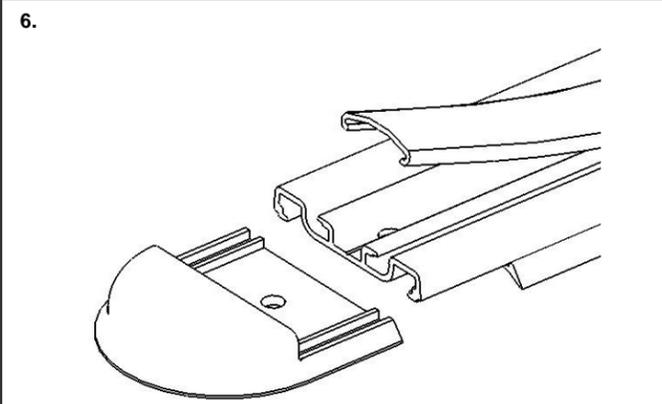

6. Center the bottom gasket on each track by sliding the end caps into the ends of the track.

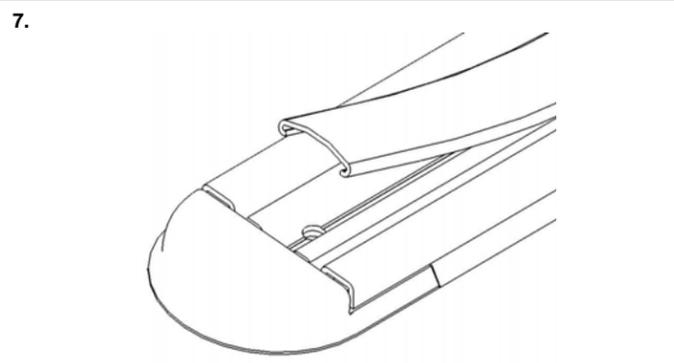


7. Temporarily secure the end caps to the track with tape. Lift the edges of the top gasket enough to reveal both corner holes. Reposition the track on the roof, centering the center punch marks with the corner holes.

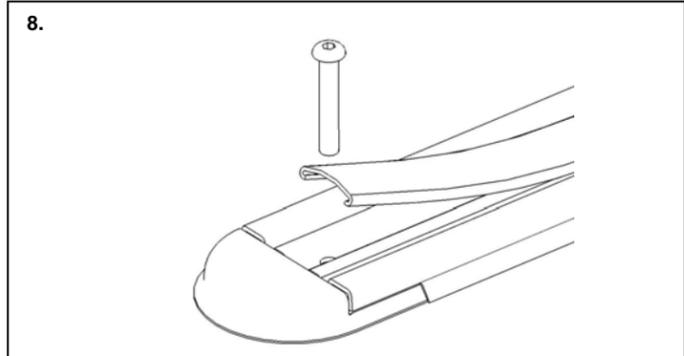


8. Using the corner hole as a guide, drill a 1/4" diameter hole through the roof. Slide the 1/4-20 x 3/4" screw through the hole. Recheck the position of the other corner hole over the center punch mark. Reposition if needed. Using the other corner hole as a guide, drill a 1/4" diameter hole through the roof and place the 1/4-20 x 3/4" screw through.

9. Slide the rack anchors to one side. Lift the top cover gasket on the other end and note the center mounting hole. Using the center mounting hole as guide; drill a 1/4" diameter hole through the roof / cap. Insert a 1/4-20 x 3/4" screw through the hole. Repeat for other track.

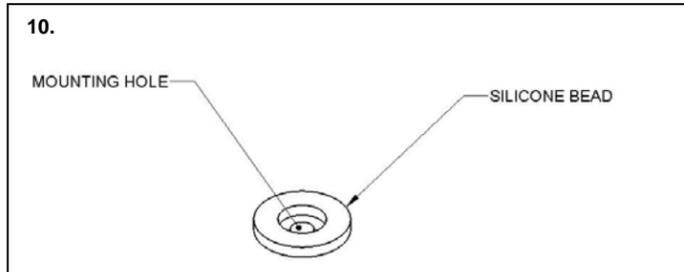


10. Remove the tracks from the roof. Clean any debris from drilling the holes. Place a bead of silicone around each hole on the roof / cap / tonneau. A bead of 1 inch in diameter (25mm), 1/8" (3mm) in height and 1/4" (6mm) in width should be sufficient to seal the holes.


11. Place two 1/4-20 x 3/4" screws through the corner ends of the track. Using the two screws as guides, position the track with the temporarily secured end caps over mounting holes. Place the track onto the roof.

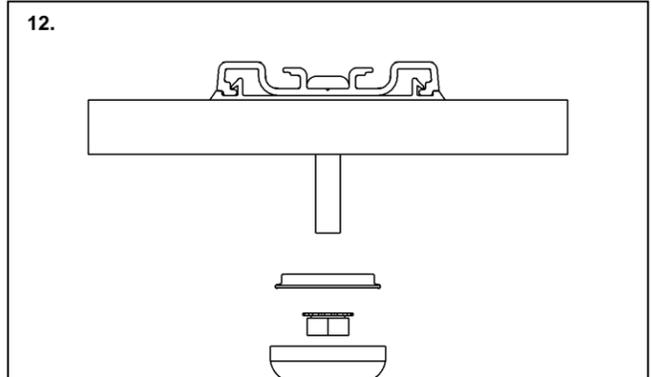

12. Place the remaining 1/4-20 x 3/4" screws through the center mounting holes and into the roof. Secure track to roof by tightening the screws with flanged washers and nuts with integral lock washers. Note the integral lock washer faces the flanged washer!

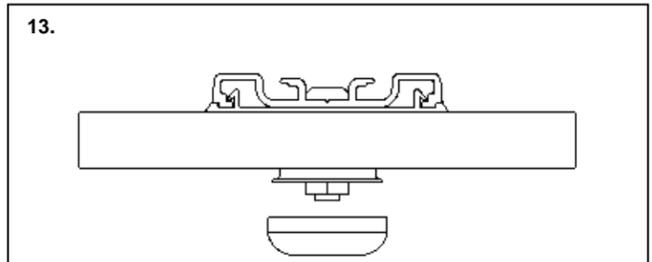

13. If necessary, cut screws to allow caps to fit properly on flanged washers. Press caps onto the flanged washers. Repeat steps 11-13 for other track.

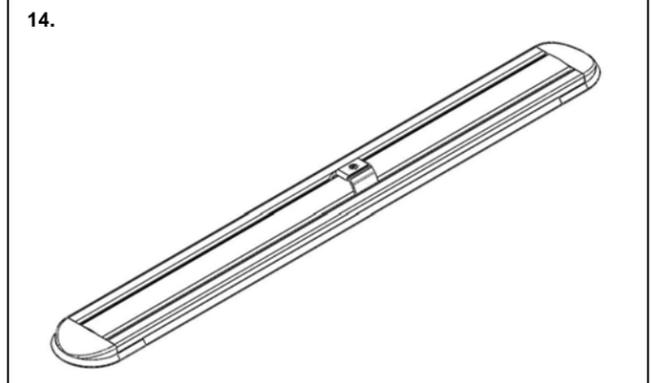

14. Remove the tape securing the end caps to the track. Snap the top cover gasket into place. Adjust the sliding rack anchors to desired locations. Place the cross bar over the rack anchors.