

INSTALLATION GUIDE

CVR-5

75 minutes

Normal install time

Keep an eye out for these icons:

!

IMPORTANT!

Important installation information

★

Helpful Hints

Tips to assist installation

PARTS INCLUDED:

Cab Panel

Center Panel

Tail Panel

Mounting Brackets (2)

Cap Clamps (4)

1/8" Hex Key

Gas Springs (4)

TOOLS REQUIRED:

Ratchet Wrench, (Torque Wrench preferred)

9/16" Socket

T30 Torx/Star Wrench

7/16" Socket


PREPARE THE BED

1

Remove the trio of factory bolts that run under the bed rail along the length of the driver-side cargo bed wall using a T30 Torx wrench. Repeat on passenger side.

★

Penetrating oil may be helpful to remove these bolts.

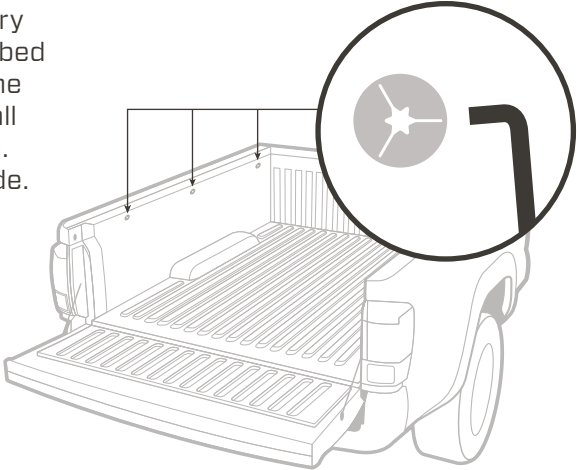

2

Use those bolts to fasten a mounting bracket to the wall, its clamp strip up and jutting inward. Repeat on passenger side.




MOUNT THE PANELS

3

Place the center panel across the bed cheated toward the tailgate.

!

Each panel is tapered front to back. Make sure the arrow on the underside of the panel is pointed toward the tailgate.

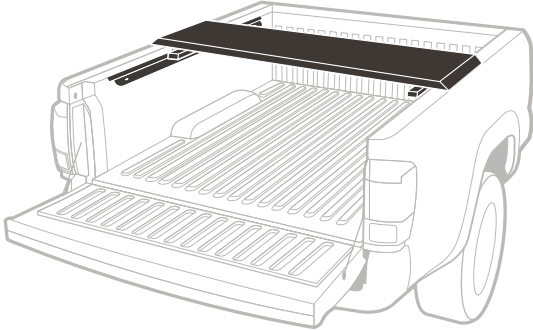

4


Attach the tail panel by holding it at a 90° angle from the bed rails and begin to mate the driver's side hinge first which is slightly longer.

★

Mating hinges is easiest when you engage the longer pin first.

FIRST

SECOND

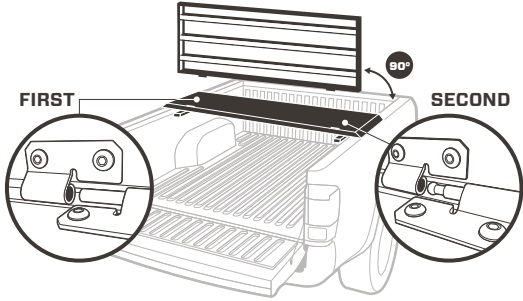

5


In the same way, attach the cab panel by holding it at a 90° angle from the bed rails and begin to mate the passenger side hinge first which is slightly longer.

CAUTION!

Be sure all hinges are fully mated before lowering panels.

6

Position the cover front to back so that the front of the cab panel lines up with the outside edge of the center of the bulkhead. Center the cover side-to-side on the truck.

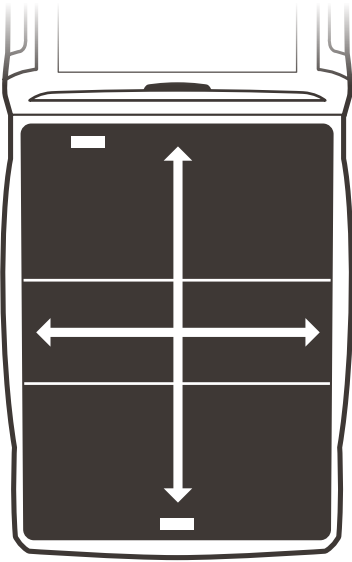

DiamondBackCovers.com / 800 935 4002



CONTINUED ON NEXT PAGE >

POSITIONING CLAMPS

7 Position the cap clamps as far apart as possible under the center panel. Attach the center panel by uniformly tightening a cap clamp using a 9/16" socket to between **5-6 ft-lbs.**


! While tightening clamps, be aware of possible bed rail cap deformation. Overtightening clamps will damage bed rail caps and cause leaking.

! Retighten after a week of use. Check them every time you haul on top.

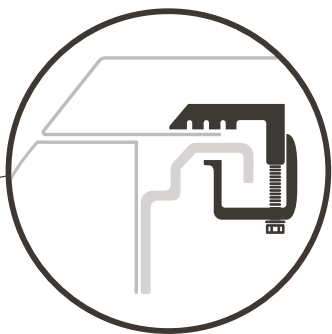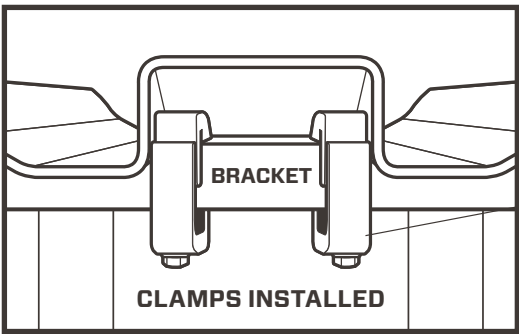

ADJUST THE LOCK RODS

8 Loosen set screws for the tail and cab panel lock rods with the provided hex key and retighten each lock rod after ensuring **three things...**

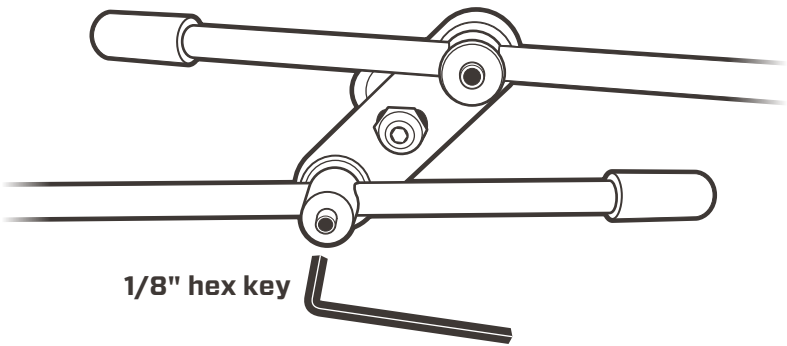

CORRECT ORIENTATION

+ HANDLE OPEN


— HANDLE CLOSED

1
The Z bend orientation is always maintained

2
With the lock handle in the open position, the rod tips clear the bracket

3
With the lock handle in the closed position, be sure the lock rods are fully under the bracket and are engaged as far as possible.

9 After properly aligning the lock rods in the closed position, it is time to tighten all brackets using a 7/16" socket. To ensure a tight seal, it is crucial to simultaneously push up on the bracket AND apply downward pressure on the cover. Repeat for all bracket locations.

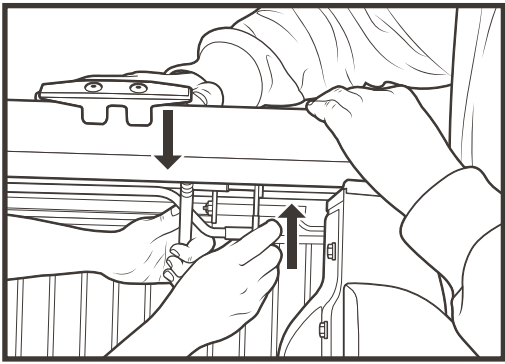


! The panels may be tough to open and close at first. Leave the panels closed as much as possible to allow the weatherstrip to break in. After a few days, you'll find things working smoothly.

★ The cab panel has a safety spring lock handle ensuring you engage the lock rods when closing the panel. This helps prevent accidental opening of the panel while driving.

! If you are installing a Cross Bin, do so now. Refer to the Cross Bin Installation Guide for details.


ATTACH THE GAS SPRINGS & SAFETY CATCH

10 Open the cab panel. Have a 2nd person support it in the open position. Loop the end of the cable tethers around the ball stud arms, making sure to go beyond the ball stud and nut.

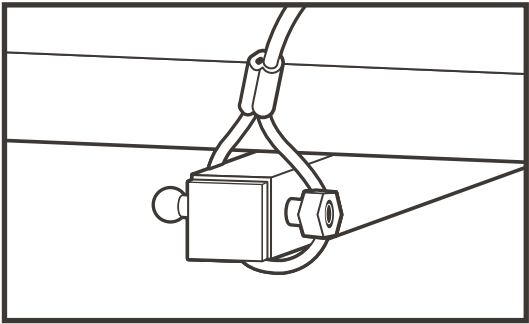


11 Attach 2 gas springs to the cab panel.

! Make sure the barrel end is up. If you install your gas springs upside down, they'll fail.

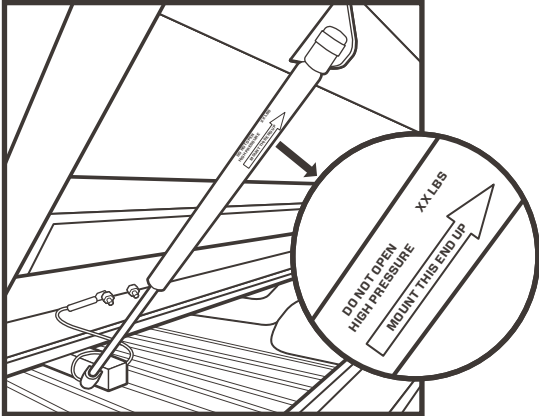

★ If 2 of your gas springs have heavier poundage printed on them, use them here.

12 Attach the safety catch by pulling down on the panel and pushing the keyhole at the bottom of the safety catch around the nut, making sure to engage the spring clip.

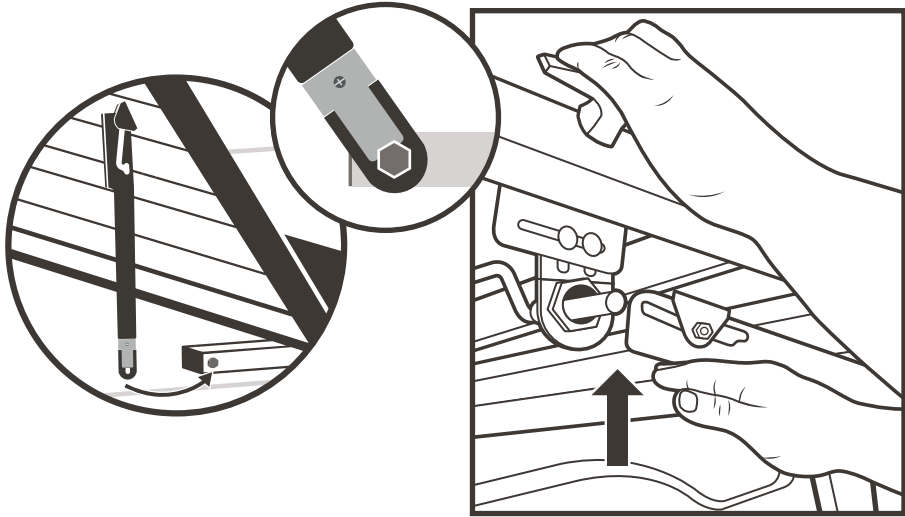

★ With the safety catch in place, your cab panel will only open partially. To fully open the panel, pull down on panel while using your other hand to push up on the flat part of the catch until it disengages.

13 Attach the 2 remaining gas springs on the tail panel, again making sure the barrel end is up.

14 Leave the cover closed and locked for 24 hours to allow the pressure-sensitive weatherstrip adhesive to fully cure.

🕒 **24 hours**
Adhesive cure time

📅 **For first 2 weeks after installation**
open tail panel on cover before operating tailgate.