

INSTALLATION GUIDE

CVR-SB2-6


20 minutes
Normal install time

Keep an eye out for these icons:

! IMPORTANT!
Important installation information

★ Helpful Hints
Tips to assist installation

PARTS INCLUDED:

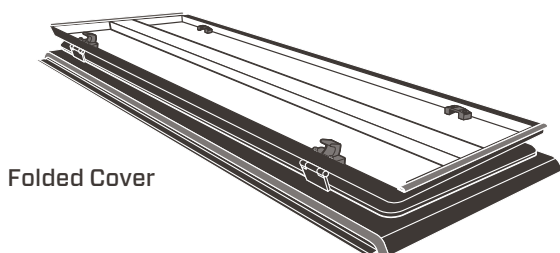

Folded Cover



Tie-Down Straps (2)



Mounting Brackets (2)

TOOLS REQUIRED:



Automotive
Silicone Spray




T30 Torx/
Star Wrench

! PRE-INSTALLATION NOTES (REVIEW ALL OTHER INCLUDED INSTALLATION GUIDES BEFORE BEGINNING)

Due to differences in tailgate designs, we recommend an application of automotive silicone spray on the tail panel weatherstrip. This will promote smoother operation and help avoid wear and tear.

PREPARE THE BED

- 1** Remove the three factory bolts that run under the bed rail along the length of the driver-side cargo bed wall using a T30 Torx wrench. Repeat on passenger side.

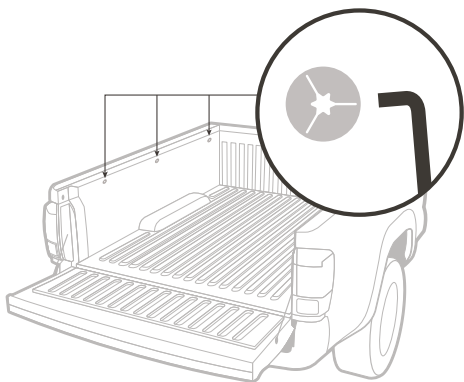


- 2** Use those bolts to fasten a mounting bracket to the wall. Repeat on passenger side.



★ Penetrating oil may be helpful to remove these bolts.


INSTALL COVER

- 3** Place cover on top of the bed rails near the cab and oriented so that the tie-down straps are closest to the cab.

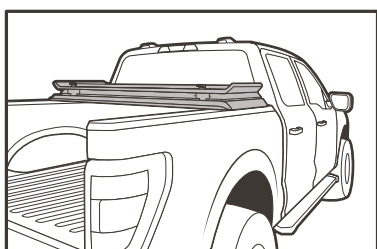


! Do not slide the cover into position. This could tear the perimeter weatherstrip.


- 4** Remove straps to allow cover to unfold.

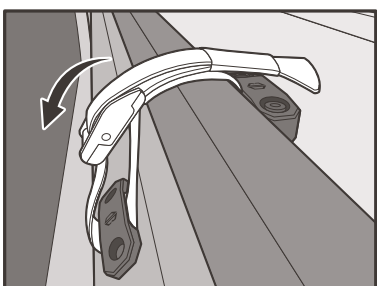

- 5** Carefully unfold the cover towards the tailgate by applying force at the double-hinge area and allowing gravity to assist with unfolding.

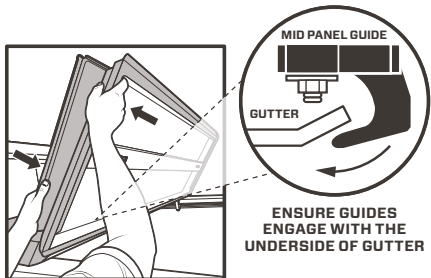


Holding mid and tail panels tightly together, begin unfolding towards tailgate.

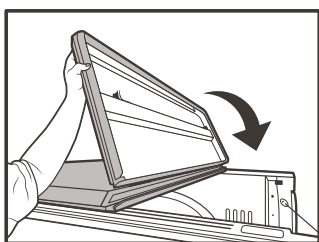


Unfold tail panel towards tailgate.

! Do not lift directly upwards at the hinge area as it can result in damage to the gutter and guides.

- 6** Position the cover front to back so that the cab panel weatherstrip is fully resting on the bulkhead, ensuring the cab panel is not touching the back of the cab. Center the cover side-to-side on the truck.

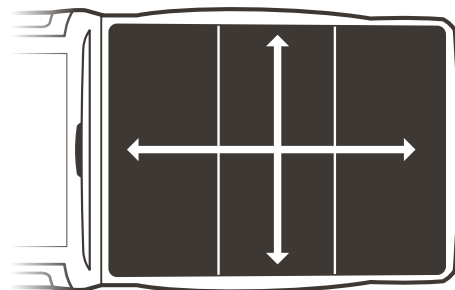


- 7** Release cab panel clamp from the track, position cab clamp jaw into the bed wall Mounting Bracket. **Tighten until stud contacts the bedrail cap, or a noticeable change in effort is felt.** Then turn one more full rotation.

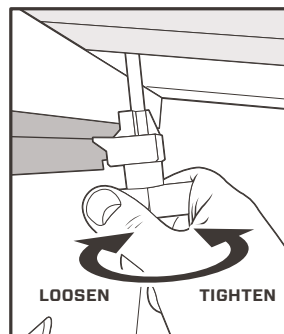


- 8** Attach safety tethers to the lowest available forward tie-down point in the bed of the truck.

! Do not operate vehicle without safety tethers engaged.


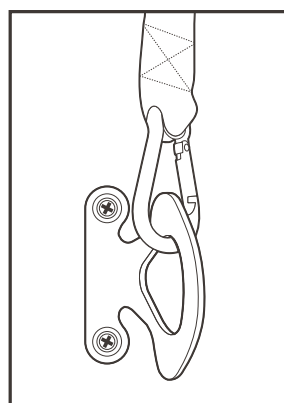


INSTALL COVER (CONTINUED)

- 9 Release the handle from the track and position clamp jaw into the Mounting Bracket to begin engaging.

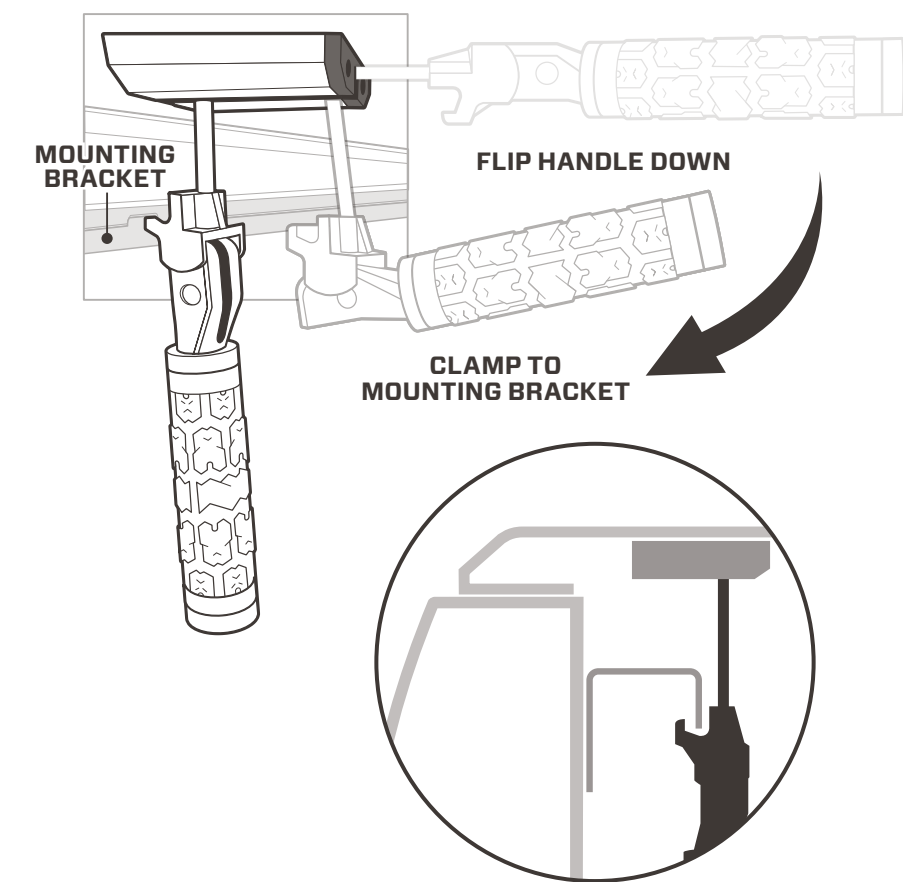

- 10 Thoroughly compress the weatherstrip by applying a significant amount of downward pressure to the tail panel and engage the clamp. The clamp tension should be firm enough to clamp the cover securely to the Mounting Bracket with one hand. Adjust the tension by rotating the handle clockwise to tighten, and counter clockwise to loosen.

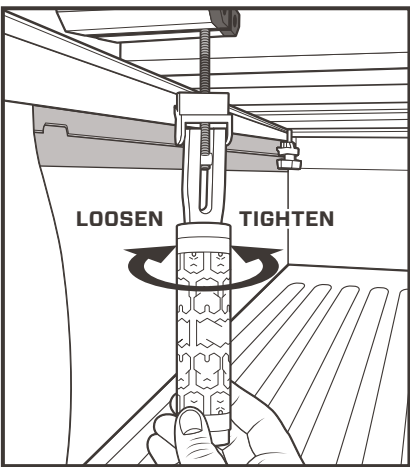
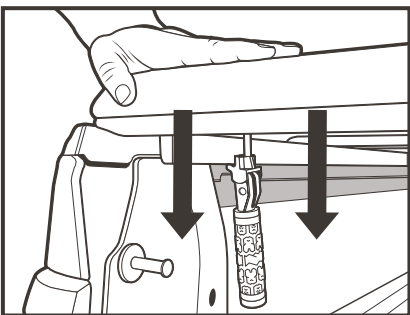


- ★ Due to differences in tailgate designs, we recommend an application of automotive silicone spray on the tail panel weatherstrip. This will promote smoother operation and help avoid wear and tear.
- ★ Some automatic tailgates may encounter resistance while opening and closing during break-in period. Manual assistance may be required.


- 11 Leave the cover closed and clamped for 24 hours to allow the pressure-sensitive weatherstrip adhesive to fully cure.

TO FOLD COVER:

- STEP 1 Release clamp and flip handle up, ensuring it locks in place (flush with panel).

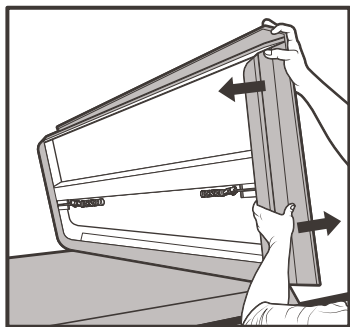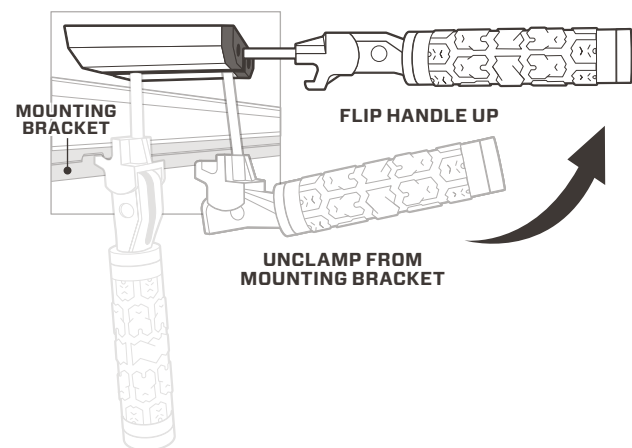


Lift tail panel and fold to mid panel. While holding tightly together, fold on to cab panel.

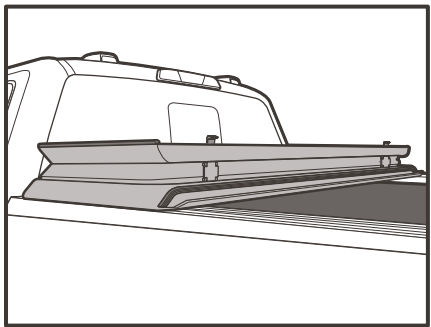


- ! Apply force towards the tailgate at the double-hinge area when folding and unfolding the mid panel. Do not lift directly upwards at the hinge area. Let gravity assist in folding/unfolding.


- STEP 2 Secure cover with included straps before driving in the open position.

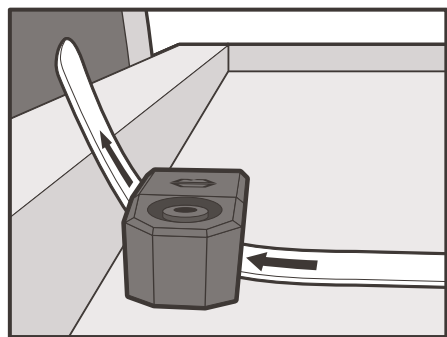


Feed straps through underside tie-down

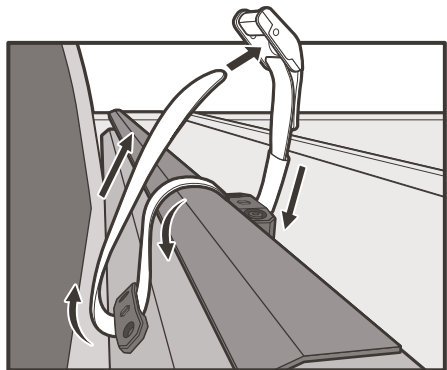

Route strap accordingly

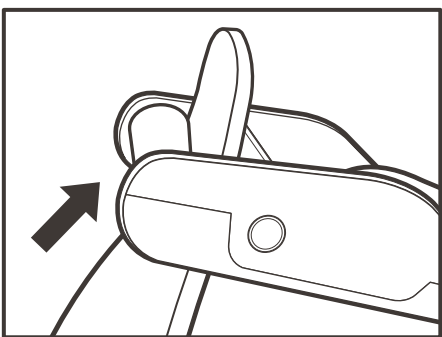

Ensure strap is properly inserted through buckle (with latch facing up)

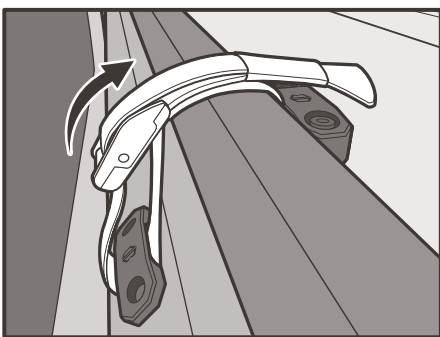

Pull strap tight and make sure buckle is securely engaged

- ! Do not operate vehicle without securing the folded cover.