



**DIAMONDBACK**

DiamondBackCovers.com / 800 935 4002

**CROSS BIN**

WITH DIAMONDBACK HD & SE

# INSTALLATION GUIDE

AX-4

**10 minutes**  
Normal install time

Keep an eye out for these icons:

**! IMPORTANT!**  
Important installation information

**★ Helpful Hints**  
Tips to assist installation

## PARTS INCLUDED:



13" Cross Bin

or



8" Cross Bin

or



4T Cross Bin

## PRE-INSTALLATION NOTE:


Install your DiamondBack cover before installing the Cross Bin.

If you have a '19-up Ram 1500 with Multifunction Tailgate, remove the factory reinforcement brackets from the front corners of the cargo bed first.

## INSTRUCTIONS

**1** Open the cab panel of the cover. Detach the bottom ends of its gas springs from their ball studs. Fold the panel completely back until it rests on the closed portion of the cover.

**2** Place the **bin** into the cargo bed so that its support flanges rest on the bed rails.

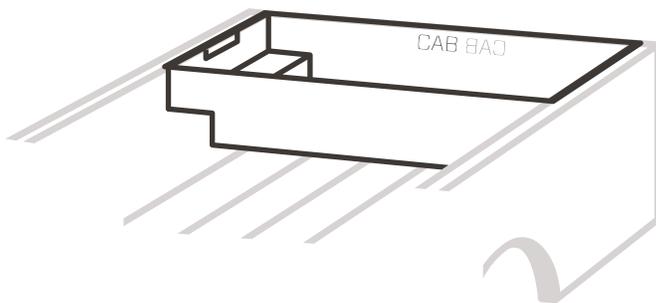


**★** Many pickup truck cargo beds are tapered, which means that many Cross Bins have a front and back. Look for the word "CAB" etched into one of the longer walls of the bin (could be on inside or outside of wall); make that wall the one nearest the cab.

**3** Move the bin as far forward as possible.

**4** Optional: For bumpy driving conditions, fasten the bin to the bed rail lips using self-drilling sheet metal screws.

**!** To fasten the bin to a current-generation F-Series pickup, use rivet nuts and bolts.

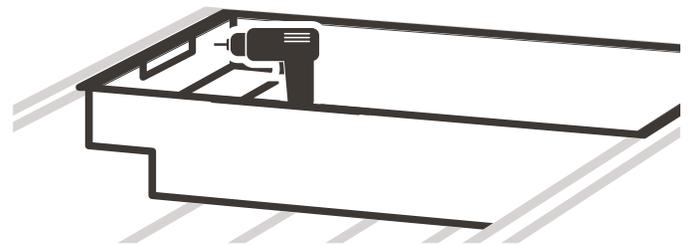

**5** If you have a '19-up Ram 1500 with Multifunction Tailgate, reinstall the factory reinforcement brackets in the front corners of the cargo bed now.

**6** If you just installed the bin under a DiamondBack cover you've had for a while, you may find that your cab-panel lock rods are now more difficult to operate. If so, use the rod guide brackets and a 7/16" socket to lower the rods slightly.

**!** Remember to keep the cargo in the Cross Bin clear of cab panel's safety catch to avoid interference.



**DIAMONDBACK**

DiamondBackCovers.com / 800 935 4002

**CROSS BIN**  
WITH DIAMONDBACK 270 & 180

# INSTALLATION GUIDE

AX-4

**20 minutes**  
Normal install time

Keep an eye out for these icons:

**! IMPORTANT!**  
Important installation information

**★ Helpful Hints**  
Tips to assist installation

## PARTS INCLUDED:




13" Cross Bin

or



8" Cross Bin

or

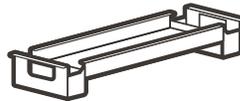

4T Cross Bin


## PRE-INSTALLATION NOTES:

If your DiamondBack cover is already installed, you must detach and slide the cover back about two feet to allow room for you to install the Cross Bin.

If you haven't yet installed your DiamondBack cover and it came with lock rod striker brackets, a clamp bracket, or a bulkhead angle, you should install those prior to installing the Cross Bin.

## INSTRUCTIONS

- 1** Place the **bin** into the cargo bed so that its support flanges rest on the bed rails.

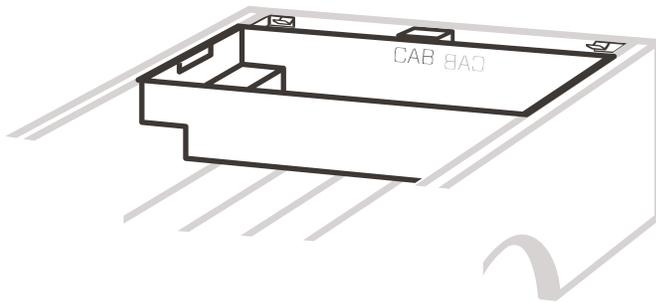

**★** Many pickup truck cargo beds are tapered, which means that many Cross Bins have a front and back. Look for the word "CAB" etched into one of the longer walls of the bin (could be on inside or outside of wall); make that wall the one nearest the cab.

- 2** Finish installing or re-installing the DiamondBack cover.

**★** With the bin in place, you won't be able to attach the front clamps or adjust the cab-panel lock rods of your cover from inside the truck as instructed. You'll need to do this from the side of the truck, which will take additional time.

- 3** Move the bin as far forward as possible.

- 4** Optional: For bumpy driving conditions, fasten the bin to the bed rail lips using self-drilling sheet metal screws.

- !** To fasten the bin to a current-generation F-Series pickup, use rivet nuts and bolts.

