

INSTALLATION GUIDE

BH-2

20 minutes
Normal install time

Keep an eye out for these icons:

IMPORTANT!
Important installation information

Helpful Hints
Tips to assist installation

PART INCLUDED



Silicone

TOOLS REQUIRED



Rubbing Alcohol



Clean, Lint-Free Cloth



Flashlight (optional)



Scissors


PRE-INSTALLATION NOTE:

It's very important that the areas for silicone application be both dry and absolutely free of dirt, oil, or any other contaminants.

To improve adhesion, make sure the surface temperature of your truck is at least 50°F and will remain so for at least a day.

SILICONE THE GAPS

- 1 Cut the silicone nozzle to a bead size that matches the width of the gaps between the square-tube top rail and the bed rail caps.
- 2 Fill the front of the driver-side gap with a column of silicone.
- 3 Bridge the top of the same gap with silicone.
- 4 Repeat steps 2-3 on the passenger side.
- 5 Wipe up any excess silicone.

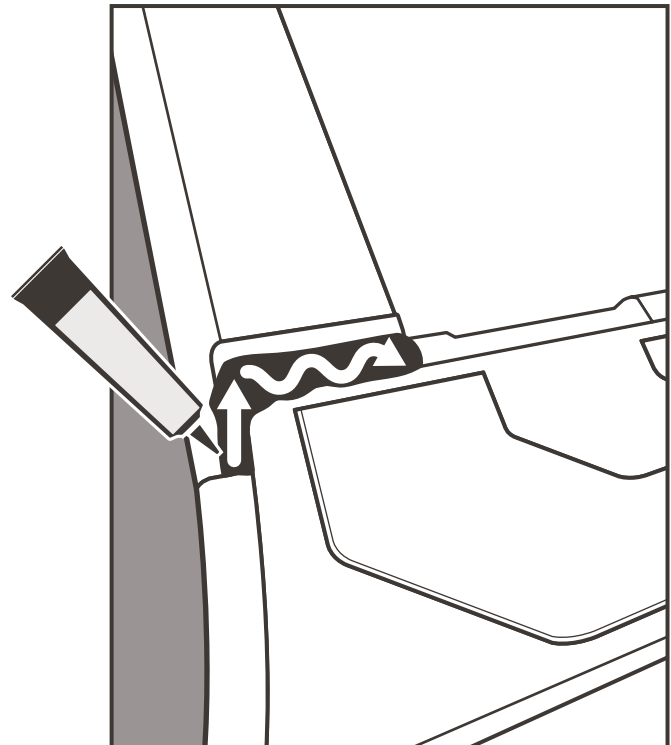

SILICONE THE GAPS (CONTINUED)

6 With the truck in a well-lit area or a second person shining a light at the driver-side, front exterior corner of the cargo bed, fill the hidden gap way up under the interior corner of the driver-side bed rail with silicone until you can see no more light coming through.

7 Repeat step 6 on the passenger side.

8 If your cover includes a hex key for installation, cut the plastic bag in two equal halves.

★ If you've trashed the plastic bag or one was not included with your cover, use a sandwich bag or similar material.

9 Lay a plastic bag piece over each of the silicone bridges that now span the gaps between the square-tube top rail and the bed rails caps.

10 Install the cover and reevaluate inside of the bed from application in step 6 for any additional light.

11 **After 1 week**, remove the plastic bag pieces. This allows for a full cure of the silicone.

! Avoid all moisture exposure for at least 48 hours.

